

COMPATIBLE MOBILES

ACER

ALLEGRO / BE TOUCH E130 / BE TOUCH E140 / BE TOUCH E210 / CLOUDMOBILE S500 / ICONIA SMART / ICONIA TAB A100 / ICONIA TAB A500 / ICONIA TAB A501 / ICONIA TAB B1-A71 / LIBERTY TAB / LIQUID E1 / LIQUID E2 / LIQUID EXPRESS E320 / LIQUID GALLANT E350 / LIQUID GLOW / LIQUID METAL / LIQUID MINI / LIQUID Z110 / LIQUID Z2 / LIQUID Z3 / LIQUID Z200

ALCATEL

ONE TOUCH IDOL / ONE TOUCH IDOL 2S / ONE TOUCH IDOL MINI / ONE TOUCH IDOL S / ONE TOUCH IDOL ULTRA / ONE TOUCH M'POP / ONE TOUCH POP S3 / ONE TOUCH STAR / ONE TOUCH X POP / OT-203 / OT-506 / OT-506D / OT-655 /

ASUS

GOOGLE NEXUS 7 / NEXUS 7 / PADPHONE / PADPHONE 2

BLACKBERRY

BOLD 9700 / BOLD 9780 / BOLD 9790 / BOLD TOUCH 9900 / BOLD TOUCH 9930 / CURVE 3G 9300 / CURVE 8520 / CURVE 9320 / CURVE 9360 / CURVE 9380 / PEARL 3G 9100 / PEARL 3G 9105 / PLAYBOOK / Q5 / TORCH 9800 / TORCH 9810 / TORCH 9860 / Z10

BOUYGUES TELECOM

BC 211 / BC311 / BS351 / BS401 / BS402 / BS451 / BS471 / ULTYM 4 / ULTYM 4 MAXI / ULTYM 5 / BS403 / ULTYM 5.2

DELL

AERO / MINI 3IX / STREAK / STREAK 7 / THUNDER / VENUE PRO / XCD28 / XCD35

FUJITSU

STYLISTIC S01

HP

PRE 3 / TOUCHPAD / VEER

HTC

7 MOZART / 7 PRO / 7 TROPHY / CHACHA / DESIRE 310 / DESIRE 601 / DESIRE 610 / DESIRE C / DESIRE HD / DESIRE S / DESIRE X / DESIRE Z / EVO 3D / EXPLORER / FLYER / GOOGLE NEXUS ONE / GRATIA / HD MINI / HD2 / HD7 / INCREDIBLE S / ONE / ONE M8 / ONE MINI / ONE MINI 2 / ONE S / ONE SV / ONE V / ONE X / ONE X PLUS / RADAR / RHYME / SALSA / SENSATION / SENSATION EX / SENSATION XL / TITAN / TOUCH HD MINI / WILDFIRE S / WINDOWS PHONE 8S / WINDOWS PHONE 8X / DESIRE 510 / DESIRE 620 / DESIRE 816 / DESIRE 820 / DESIRE EYE / ONE M9

HUAWEI

ASCEND D QUAD / ASCEND D QUAD XL / ASCEND D1 / ASCEND G300 / ASCEND G6 / ASCEND G6 4G / ASCEND P1 / ASCEND P1 S / ASCEND Y330 / ASCEND Y530 / G330 / G6150 / IDEOS X5 U8800 / IDEOS X6 U9000 / U8350 / ASCEND G620S / ASCEND G740 / ASCEND MATE 7 / ASCEND P7 / ASCEND Y550 / HONOR 6 PLUS / P8 LITE

LG

A110 / A133 / A155 / A170 / A200 / A250 / A290 / A310 / C310 / C320 / C360 / COOKIE 3G T320 / COOKIE LITE T300 / COOKIE

LIVE KM570 / COOKIE PLUS GS500 / COOKIE STYLE T310 / F70 / G2 / G3 / GM730 / GT350 / GT405 / GT540 / KT770 / L65 / L70 / MINI GD880 / NEXUS 5 / OPTIMUS 2X P990 / OPTIMUS 3D MAX P720 / OPTIMUS 3D P920 / OPTIMUS 4X HD P880 / OPTIMUS 7 E900 / OPTIMUS BLACK P970 / OPTIMUS CHAT C550 / OPTIMUS CHIC E720 / OPTIMUS F5 P875 / OPTIMUS F6 D505 / OPTIMUS G / OPTIMUS L3 E400 / OPTIMUS L3 II E430 / OPTIMUS L5 E610 / OPTIMUS L5 II E460 / OPTIMUS L7 II P710 / OPTIMUS L7 P700 / OPTIMUS L9 P760 / OPTIMUS ME P350 / OPTIMUS NET / OPTIMUS ONE P500 / OPTIMUS PAD / OPTIMUS PRO C660 / OPTIMUS SOL E730 / OPTIMUS VU / PRADA PHONE 3.0 / PURE GD550 / T315 / T385 / TOWN C300 / VIEWTY SMILE GT400 / VIEWTY SNAP GM360 / F60 / G FLEX 2 / G3 S / L FINO / L80 / L90 / OPTIMUS L4 II

LOGICOM

E500 / S450 / S504 / E350 / E400

MICROSOFT

LUMIA 640 / LUMIA 640 XL

MOTOROLA

ATRIX 3G / ATRIX 4G MB860 / BRAVO MB520 / DEFY + / DEFY MINI XT320 / DEXT / DROID PRO XT610 / DROID X / FIRE XT316 / FLIPSIDE MB508 / GLEAM / GLEAM PLUS / MILESTONE / MILESTONE 2 / MILESTONE XT720 / MOTO G / MOTO X / PRO / PRO + / RAZR HD XT925 / RAZR I XT890 / RAZR XT910 / SPICE XT300 / WILDER EX130 / XOOM / MOTO E / MOTO G 2014 / MOTO X 2EME GENERATION / NEXUS 6

NOKIA

500 / 603 / 6650 FOLD / 6700 CLASSIC / 701 / ASHA 311 / C2-01 / C3-01 TOUCH AND TYPE / C5 / C5-03 / C6-01 / C7-00 / E5 / E7 / LUMIA 1020 / LUMIA 1320 / LUMIA 1520 / LUMIA 510 / LUMIA 520 / LUMIA 620 / LUMIA 625 / LUMIA 635 / LUMIA 720 / LUMIA 820 / LUMIA 920 / LUMIA 925 / LUMIA 930 / N8 / ORO / X / X2 / X2-02 / X3-02 TOUCH AND TYPE / XL / LUMIA 435 / LUMIA 530 / LUMIA 532 / LUMIA 535 / LUMIA 730 / LUMIA 735 / LUMIA 830

PANASONIC

ELUGA / ELUGA POWER

SAMSUNG

B2710 / C3350 / C3520 / C3530 / C3750 / CHAT 222 E2220 / CHAT 335 S3350 / CHAT 350 C3500 / CHAT 357 S3570 / CORBY II S3850 / E2530 / GALAXY 550 I5500 / GALAXY 551 I5510 / GALAXY ACE 2 I8160 / GALAXY ACE 3 S7270 / GALAXY ACE PLUS S7500 / GALAXY ACE S5830 / GALAXY ACE S5830 ZV / GALAXY BEAM I8530 / GALAXY CAMERA GC100 / GALAXY CORE 4G G386 / GALAXY CORE I8260 / GALAXY CORE PLUS G3500 / GALAXY EXPRESS 2 / GALAXY EXPRESS I8730 / GALAXY FAME LITE S6790 / GALAXY FAME S6810 / GALAXY FIT S5670 / GALAXY GIO S5660 / GALAXY GRAND 2 G7100 / GALAXY GRAND I9082 / GALAXY i7500 / GALAXY M PRO B7800 / GALAXY MEGA 5.8 I9150 / GALAXY MEGA I9200 / GALAXY MINI 2 S6500 / GALAXY MINI S5570 / GALAXY NAOS I5801 / GALAXY NEXUS I9250 / GALAXY NOTE 10.1 2014 P600 / GALAXY NOTE 2 N7100 / GALAXY NOTE 3 LITE N7505 / GALAXY NOTE 3 N9000 / GALAXY NOTE 8.0 N5100 / GALAXY NOTE N7000 / GALAXY POCKET NEO S5310 / GALAXY POCKET PLUS S5301 / GALAXY POCKET S5300 / GALAXY POP PLUS S55701 / GALAXY PRO B7510 / GALAXY R I9103 / GALAXY S 2 I9100 / GALAXY S 2 I9100 NFC / GALAXY S 2 LTE I9210 / GALAXY S 2 PLUS I9105 / GALAXY S 3 4G I9305 / GALAXY S 3 I9300 / GALAXY S 3 MINI I8190 / GALAXY S 4 ACTIVE I9295 / GALAXY S 4 I9500 / GALAXY S 4 MINI I9190 / GALAXY S 4 ZOOM / GALAXY S 5 G900 / GALAXY S ADVANCE I9070 / GALAXY S I9000 / GALAXY S PLUS I9001 / GALAXY S SCL I9003 / GALAXY TAB 3 10.1 P5210 / GALAXY TAB 3 7.0 T210 / GALAXY TAB 3 8.0 T310 / GALAXY TAB PRO 10.1 T520 / GALAXY TEOS I5800 / GALAXY TREND LITE S7390 / GALAXY TREND S7560 / GALAXY W I8150 / GALAXY XCOVER 2 S7710 / GALAXY XCOVER S5690 / GALAXY Y PRO B5510 / GALAXY Y S5360 / GALAXY YOUNG S6310 / GOOGLE NEXUS 10 P8110 / MISS PLAYER S7070 / NEXUS S I9023 / OMNIA M S7530 / OMNIA W I8350 / PLAYER CITY S5260 / PLAYER FIVE S5560 / PLAYER HD I8910 / PLAYER MINI 2 C3310 / PLAYER MINI C3300 / PLAYER STAR 2 S5620 / PLAYER STAR S5600 / PLAYER ULTRA S8300 / S5610 / SHARK S5350 / SMILEY T359 / STAR 3 S5220 / WAVE 3 S8600 / WAVE 533 S5330 / WAVE 575 S5750 / WAVE 578 S5780 / WAVE 723 S7230 / WAVE II S8530 / WAVE M S7250 / WAVE ONE S5250 / WAVE S8500 / WAVE Y S5380 / C3595 / E1270 / GALAXY A3 A300 / GALAXY A5 A500 / GALAXY A7 A700 / GALAXY ACE 4 4G G357 / GALAXY ALPHA G850 / GALAXY CORE PRIME G360 / GALAXY GRAND PRIME G530 / GALAXY J1 J100 / GALAXY K ZOOM C115 / GALAXY NOTE 4 N910 / GALAXY NOTE EDGE N915 / GALAXY POCKET 2 G110 / GALAXY S 5 MINI G800 / GALAXY S 6 EDGE G925 / GALAXY S 6 G920 / GALAXY TREND PLUS S7580 / GALAXY YOUNG 2 G130

SFR

S BY SFR 101 / S BY SFR 102 / S BY SFR 116 / S BY SFR 501 / SFR S BY SFR 117 / STARADDICT 2 / STARADDICT 2 PLUS / STARADDICT 3 / STARADDICT 4 / STARNAUTE 2 / STARSHINE / STARSHINE 2 / STARTEXT 2 / STARTRAIL 2 / STARTRAIL 3 / STARTRAIL 4 / WINDOWS PHONE INTERNET 7 / S BY SFR 118 / S BY SFR 1180 / S BY SFR 124 / STARTRAIL 5 / STARTRAIL 6 / STARTRAIL 6 PLUS

SONY

ASPEN / LIVE WITH WALKMAN / MIX WALKMAN / SPIRO / TABLET S / TXT / TXT PRO / VIVAZ PRO / VIVAZ U5 / W8 / XPERIA ACTIVE / XPERIA ARC / XPERIA ARC S / XPERIA E / XPERIA E1 / XPERIA GO / XPERIA J / XPERIA KYNO / XPERIA KYNO V / XPERIA M / XPERIA M2 / XPERIA MINI / XPERIA MINI PRO / XPERIA MIRO / XPERIA P / XPERIA PLAY / XPERIA PRO / XPERIA RAY / XPERIA S / XPERIA SOLA / XPERIA SP / XPERIA T / XPERIA T2 ULTRA / XPERIA TABLET Z / XPERIA TIPO / XPERIA U / XPERIA X10 / XPERIA X10 MINI / XPERIA X10 MINI PRO / XPERIA X8 / XPERIA Z / XPERIA Z ULTRA / XPERIA Z1 / XPERIA Z1 COMPACT / XPERIA Z2 / XPERIA ZL / XPERIA C3 / XPERIA E3 / XPERIA E4 / XPERIA M4 AQUA / XPERIA T3 / XPERIA Z3 / XPERIA Z3 COMPACT

SOSH

LE MOBILE SOSH

WIKO

BIRDY / CINK / CINK FIVE / CINK KING / CINK PEAX / CINK PEAX 2 / CINK PLUS / CINK SLIM / DARKFULL / DARKMOON / DARKNIGHT / DARKSIDE / DEA / DUELLE / HIGHWAY / IGGY / OZZY / RAINBOW / SOAP / STA